


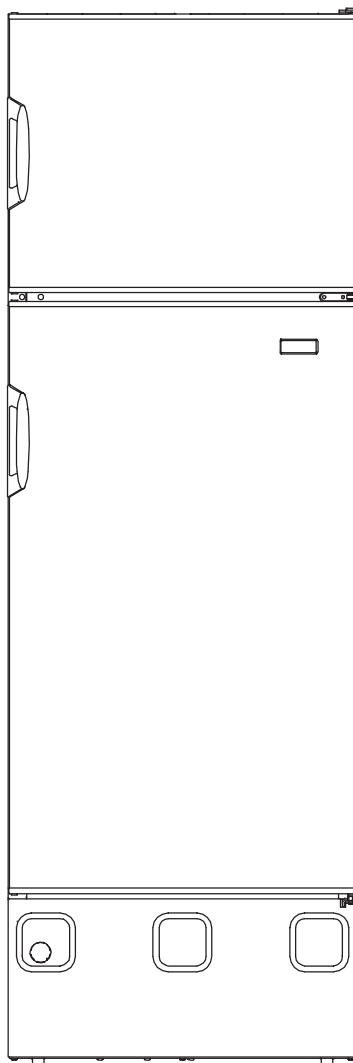

INSTALLATION AND OPERATING INSTRUCTIONS

RK400

REFRIGERATOR FOR
KEROSENE OPERATION



USA

Service Office
Dometic Corporation
2320 Industrial Pkwy.
Elkhart, IN 46516
Phone: 574-294-2511

Corporate Office

2320 Industrial Parkway Elkhart, IN 46515

For Service Center Assistance

Call: 800-544-4881


CANADA

Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
Phone: 519-720-9578

CONTENTS

INSTALLATION	4
FILLING THE TANK	4
LIGHTING THE BURNER	4
MAINTENANCE	5
REPLACING THE WICK	5
CLEANING THE FLUE SYSTEM	5
DEFROSTING	5
LIGHTING	5
POINTS TO REMEMBER	6
TROUBLESHOOTING	6
BURNER PARTS	6

FIG. 1

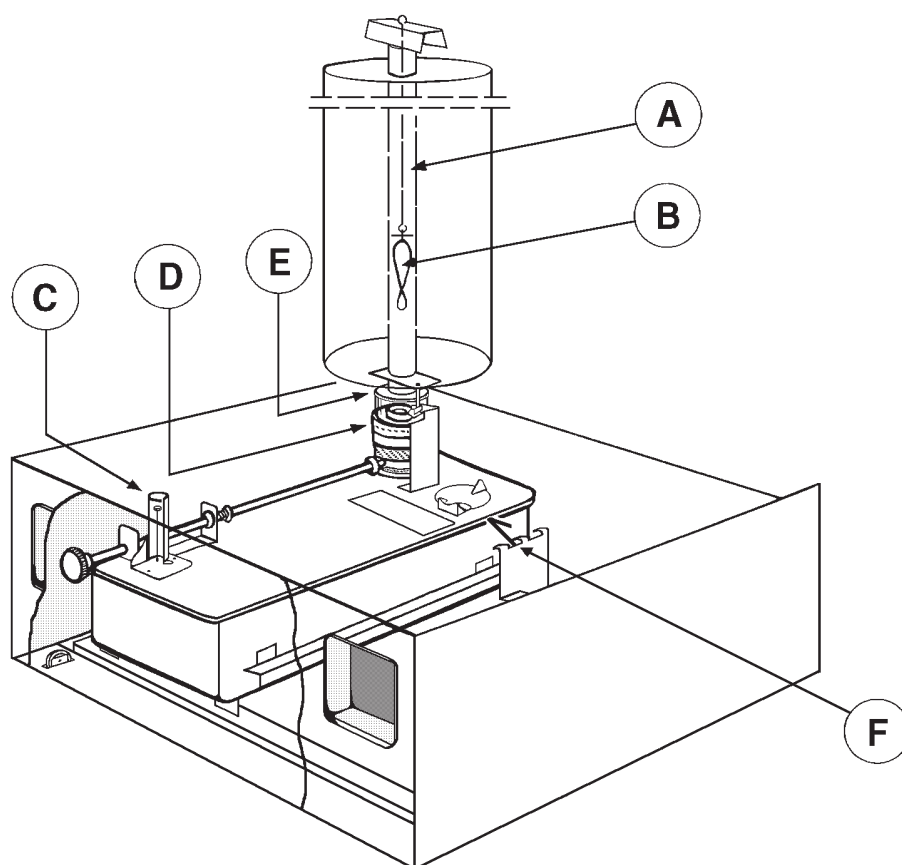

- A. Flue tube
- B. Flue baffle
- C. Fuel gauge
- D. Burner
- E. Seal ring
- F. Lever arm

INSTALLATION

- The cabinet must be installed on a firm floor and must be in a horizontal position. Use a water level and check both ways in the freezer compartment.
- Avoid locating the refrigerator in a room subject to high temperatures or strong draughts.
- See that a space of at least 16 inches (400 mm) is left free above the top of the cabinet to allow an unrestricted circulation of air, which is essential for the efficient operation of the refrigerator. The ventilation opening at the top of the cabinet must not be covered in any way.
- The refrigerator should not be placed in a small pantry or similar location.
- The flue baffle must be positioned as shown on the illustration.

FILLING THE TANK

- Always use the kerosene funnel when filling the tank, and fill until the gauge pointer approaches the red mark.
- Clean off any kerosene on the top of the tank. If kerosene overflows, the tank should be removed from the refrigerator and wiped clean.
- Do not let the tank run dry while the refrigerator is in use because refrigeration will be interrupted and a portion of the wick will be burned off, reducing the life of the wick.

Always use best quality burning kerosene (Paraffin) and see that it is kept clean, dry and unadulterated. Under no circumstances must vaporizing kerosene, petrol or spirit of any kind be used.

LIGHTING THE BURNER

Remember that the kerosene lamp is an essential part of the refrigerator and that care taken to maintain it in good condition is well repaid. Before lighting a new wick for the first time, allow the wick to become soaked with kerosene for at least two hours.

1. When lighting the burner, remove the gallery, lamp glass and seal ring as one unit after turning the gallery anticlockwise to unlock (FIG. 2).
Do not attempt to light the burner by turning up the wick as high as it will go, leaving the gallery in place, as this will damage the wick and result in unsatisfactory refrigeration.


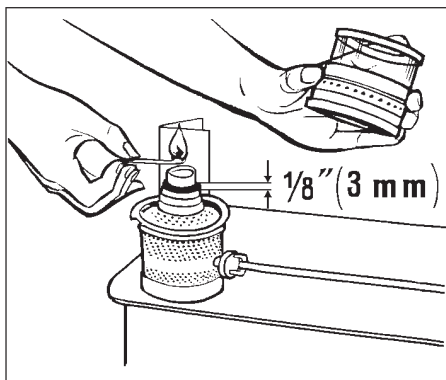


FIG. 2

2. Adjust the wick turner so that the wick height is about 1/8" (3 mm) above the top of the outer wick tube (FIG. 2).
3. Light the wick. Allow the flame to travel round the wick, and replace the gallery complete with lamp glass and seal ring.

4. Turn the gallery clockwise until locked securely in position. Should the flame be extinguished, relight following the above procedure.
5. Push the tank into the tank holder underneath the cabinet and at the rear of the refrigerator.
6. Slide the tank carefully forwards against the guide pin.
7. Carefully lift the tank by means of the lever arm and check that the guide pin enters the hole in the bracket on the left side of the burner (FIG. 3).

FIG. 3

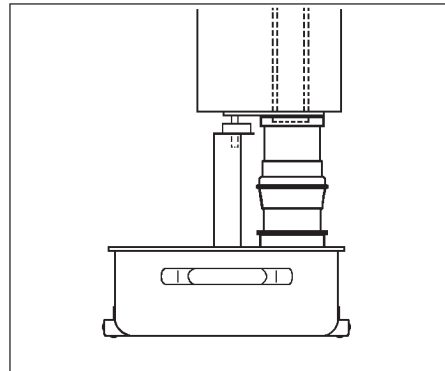

Make sure that the sealing ring on the top of the lamp glass seals against the bottom of the flue tube, it should not be any air gap between the flue tube and the sealing ring.

8. Lock the lever arm in the position where the sealing ring seals against the flue tube.
9. The burner should burn with a blue flame; a partly or wholly yellow flame indicates an air gap and must be adjusted.
10. When the burner is in position under the flue tube, adjust the wick to produce a medium-high blue flame. Wait 30 minutes to allow the burner to warm up before making any further wick adjustments.

- To obtain better cooling, turn the wick up which raises the light-blue flame.
- To make the refrigeration less cold, turn the wick down to give a blue flame of reduced height.
- To maintain steady cabinet temperatures the refrigerator should operate continuously day and night.

NOTE!

Never operate the burner with a flame having yellow tips or streaks on or in the bright blue lower portion, or with a wholly yellow flame. Such conditions will result in rapid carbonization of the wick, smell, and possible damage to the cooling unit.


Do not force wick turner if it will not turn readily, as this may be an indication that the burner needs cleaning or that the wick should be replaced.

MAINTENANCE

REPLACING THE WICK


1. Remove burner from tank.
2. Remove outer wick tube (see Burner Parts) by turning it anti-clockwise to unlock and then, lift it off the burner.
3. Turn the wick up as far as possible. Pull the wick and the wick carrier out from the top of the burner. Disengage the wick from the wick carrier.
4. A new wick should be free from moisture (water). Before inserting the new wick, make sure that the flame spreader is in position in the burner tube.
5. New wicks have adhesive papers at the tail ends to afford ease of replacement, and these should first be straightened out. Put one of the papers through the opening around the wick tube, and pull in the paper until the fabric end of the wick is through the opening.
6. Repeat the procedure with the other end of the wick in the opposite opening around the wick tube (FIG. 4).

FIG. 4

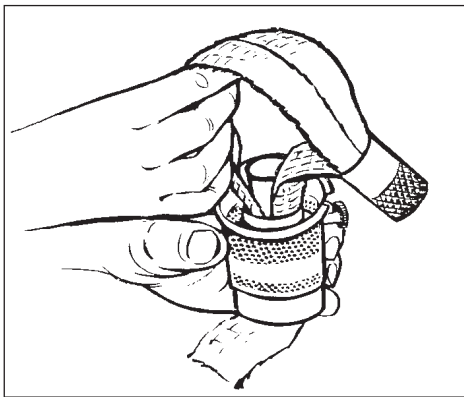

7. When both wick tails are through the respective openings, pull the wick through the burner until about 1" (25 mm) of the tails protrudes below the bottom of the burner. Be careful not to fray the top of the wick during replacement.
8. Install the wick carrier on the wick, ensuring that the rack of the wick carrier is on the same side as the wick turner, (FIG. 5).

FIG. 5

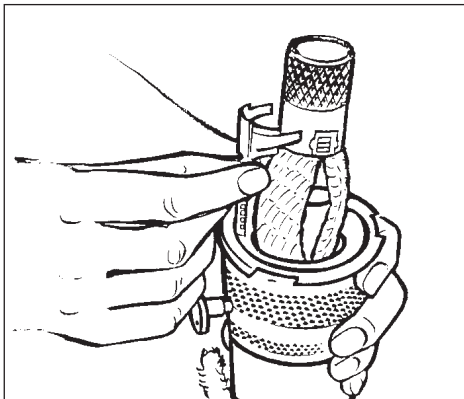

9. Ease the wick and wick carrier downwards by pulling gently on the bottom ends of the wick, and when the rack of the wick carrier enters the annular opening, guide it against the cog wheel on the wick turner.

10. Depress the wick carrier rack over the cog wheel of the wick turner and move the wick down as far as it will go.
11. Be sure that the inside reinforcement tape of the wick slips over the burner tube. If the wick gets stuck in the burner, do not force the wick turner as this may damage the wick carrier.
12. Replace the outer wick tube on the burner, pressing it down and turning it clockwise to lock in position.
13. Check that the wick can be turned up and down readily.

To prolong the life of the wick, it should be cleaned every two or three days for the first two weeks and once a month thereafter, provided a good grade of kerosene is used. When poor grade kerosene is used, the burner and wick should be cleaned at least once a week. Only Aladdin wicks can be used in this burner, see "Burner Parts".

CLEANING THE FLUE SYSTEM

Cleaning of the flue at least once every year is recommended. Poor grade kerosene may cause the burner to smoke, and as soot will then collect in the flue it should be cleaned immediately.

To clean the flue, follow these steps:

1. Remove the tank and burner.
2. Lift off the flue cap, complete with wire and flue baffle. Place a sheet of paper underneath the flue tube to catch the soot.
3. Clean the flue with the brush supplied with the refrigerator.
4. After cleaning, ensure that the flue cap and baffle are refitted in position. Note that the refrigerator will not operate properly if the flue baffle is not in place!

DEFROSTING

1. Remove all food from the refrigerator.
2. Extinguish the flame.
3. Leave the door and frozen storage compartment door open. The frost will melt rapidly and run down into a receptacle at the rear of the refrigerator where it evaporates.
4. Defrost water in the freezer compartment should be mopped up with a cloth.

It is advisable to clean the refrigerator in conjunction with defrosting. Use lukewarm water and a non-perfumed detergent. Never use scouring powder, steel wool or similar. Before starting the refrigerator again, dry out the frozen storage compartment and refrigeration space. Wash the ice-trays and fill them with fresh water.

If the refrigerator is to remain out of use:

1. Extinguish the burner flame.
2. Empty the cabinet, defrost and clean it thoroughly.
3. Leave the door ajar.

LIGHTING

The refrigerator is provided with a battery power interior light. The battery box is at the rear of the refrigerator. 4 batteries, type LR20 1,5 V are to be used.

POINTS TO REMEMBER

- Keep the refrigerator level.
- Defrost weekly or fortnightly.
- Keep the burner clean.
- Never use force to turn up the wick mover.
- Do not overload the refrigerator so that the air cannot circulate freely inside the cabinet.
- Use only good grade of kerosene-paraffin.
- Do not let the fuel tank run dry.
- Inspect the flame regularly. Make sure it is blue.

TROUBLESHOOTING

The refrigerator is not cold enough


- **Air circulation restricted round the unit.**
See that a space of at least 16 inches (400 mm) is left free above the top of the cabinet, see "Installation".
- **Refrigerator not level.**
Level cabinet so that the sides and the front are vertical. (Use a water level).
- **Yellow flame**
 - **Incorrectly lit.**
Relight correctly
 - **Improper chimney seal**
 - **Wick requires cleaning.**
Clean wick and burner
 - **Needs new wick.**
Replace the wick
 - **Inferior grade of kerosene-paraffin.**
Drain and refill the tank. Fit a new wick.
 - **Flue requires cleaning.**
See "Cleaning the flue system".
- **Flame too low or too high.**
- **Evaporator heavily frosted.**
Turn out the flame to defrost.
- **Refrigerator overloaded.**
Spread food stuffs on shelves to permit free air circulation in the cabinet.
- **Flickering flame (water in kerosene-paraffin).**
Keep storage drum or container in dry place with lid on to prevent condensed water to enter the container.

The refrigerator is too cold

- **Yellow flame.**
Burner incorrectly lit. Light the burner correctly
- **Flame too high.**
Turn down the flame.

BURNER PARTS

ALADDIN 23E

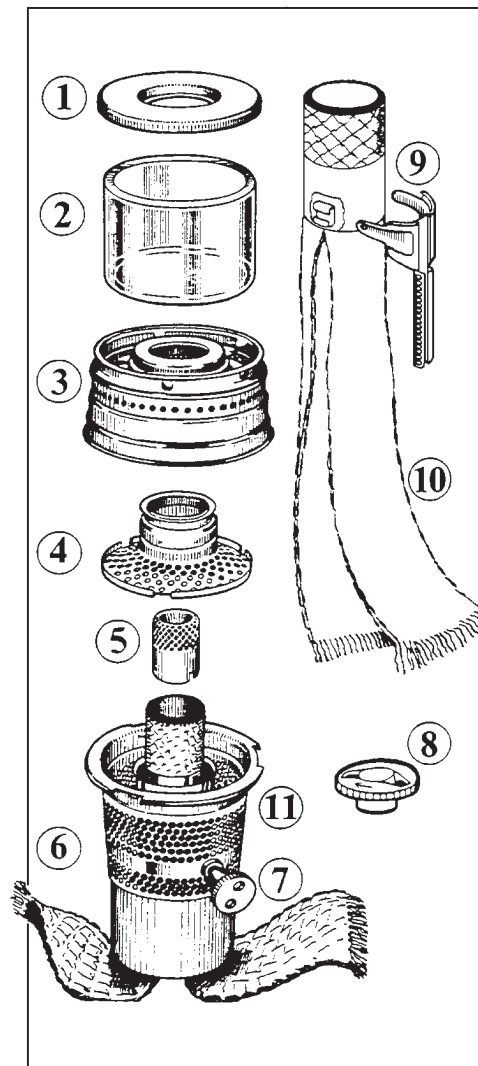

Burner Parts

1. Seal ring
2. Lamp glass
3. Gallery
4. Outer wick tube
5. Flame spreader
6. Burner base
7. Wick turner
8. Wick cleaner
9. Wick carrier
10. Wick
11. Burner complete (without lamp glass and seal ring).

